



Instruction Manual & User Guide

TRANZFORMA:Safety Gate, Barrier&Play Yard



IMPORTANT! RETAIN FOR FUTURE REFERENCE, READ CAREFULLY.



An IGC Dorel brand

Please read this manual in its entirety before assembling the product and follow all instructions contained herein.

Do not use if any part is Broken, Torn or Missing.

Please retain instruction manual for future reference.

Illustrations are representative only.

Design and style may vary.

Table of Contents

• WARNINGS	page 3
• Component list	page 4
• Usage	page 5
• To attach or remove panels and assemble play yard	page 6
• To open gate	page 7
• To remove unwanted panels	page 8
• Lock indication	
• To convert your Tranzforma to safety barrier	page 9
• To convert your Tranzforma to safety barrier(cont)	page 10
• Fitting wall brackets to a wall or door frame	page 11
• Wood fixing	
• Hard wall fixing	
• Plaster board walls	
• Helpful hint	
• How to move your Tranzforma barrier to a second location	page 12
• Using your Tranzforma as safety barrier	page 13
• Notes	page 14-15
• Product care and maintenance	
Customer service	page 16

WARNINGS

These instructions detail the safe use, assembly and maintenance of your product. Please read these instructions carefully and ensure that they are followed at all times. Failure to do so could result in serious injury or death.


- FOLLOW THE MANUFACTURER'S INSTRUCTIONS.
- MATTRESSES ARE NOT TO BE PLACED INTO OR USED WITH THIS ENCLOSURE.
- TO PREVENT SERIOUS INJURY OR DEATH, SECURELY INSTALL ENCLOSURE AND USE ACCORDING TO MANUFACTURER'S INSTRUCTION.
- NEVER USE WITH A CHILD ABLE TO CLIMB OVER OR DISLODGE THE ENCLOSURE.
- NEVER LEAVE A CHILD UNATTENDED. THIS ENCLOSURE IS TO BE USED WITH ADULT SUPERVISION AT ALL TIMES.
- INTENDED FOR USE WITH CHILDREN UP TO 18 MONTHS OF AGE.
- ENCLOSURE SHOULD NOT BE USED AS A SUBSTITUTE FOR ADULT SUPERVISION.
- USE ONLY WITH ALL OF THE CONNECTORS MECHANISMS SECURELY ENGAGED.
- ALWAYS KEEP YOUR ENCLOSURE LOCKED AND FULLY ASSEMBLED.
- IF USING THIS BARRIER TO GUARD STAIRS ENSURE THAT IF IS POSITIONED AT LEAST 50CM FROM THE STAIR AND IS SECURELY INSTALLED AND ALL LOCKED.
- ALWAYS ENSURE THAT THE PLAY YARD/BARRIER IS POSITIONED A SAFE DISTANCE AWAY FROM FIREPLACES OR OTHER HEAT SOURCES.
- YOU SHOULD CONTINUE TO REGULARLY CHECK THE STABILITY AND FIT OF THE ENCLOSURE DURING USE.
- DO NOT USE YOUR ENCLOSURE IF PARTS BECOME DAMAGED OR ARE MISSING.
- ONLY USE REPLACEMENT PARTS SUPPLIED BY IGC DOREL PTY LTD.
- PLEASE STORE ALL COMPONENTS IN A SAFE PLACE WHEN THE PLAYPEN IS NOT IN USE.
- THIS PRODUCT IS NOT A TOY. DO NOT ALLOW CHILDREN TO PLAY WITH IT. WHEN NOT IN USE, KEEP OUT OF REACH OF CHILDREN.

Components List:







Tools/Hardware Required:

Philips head screwdriver (Not Included)

Electric drill(Not Included)

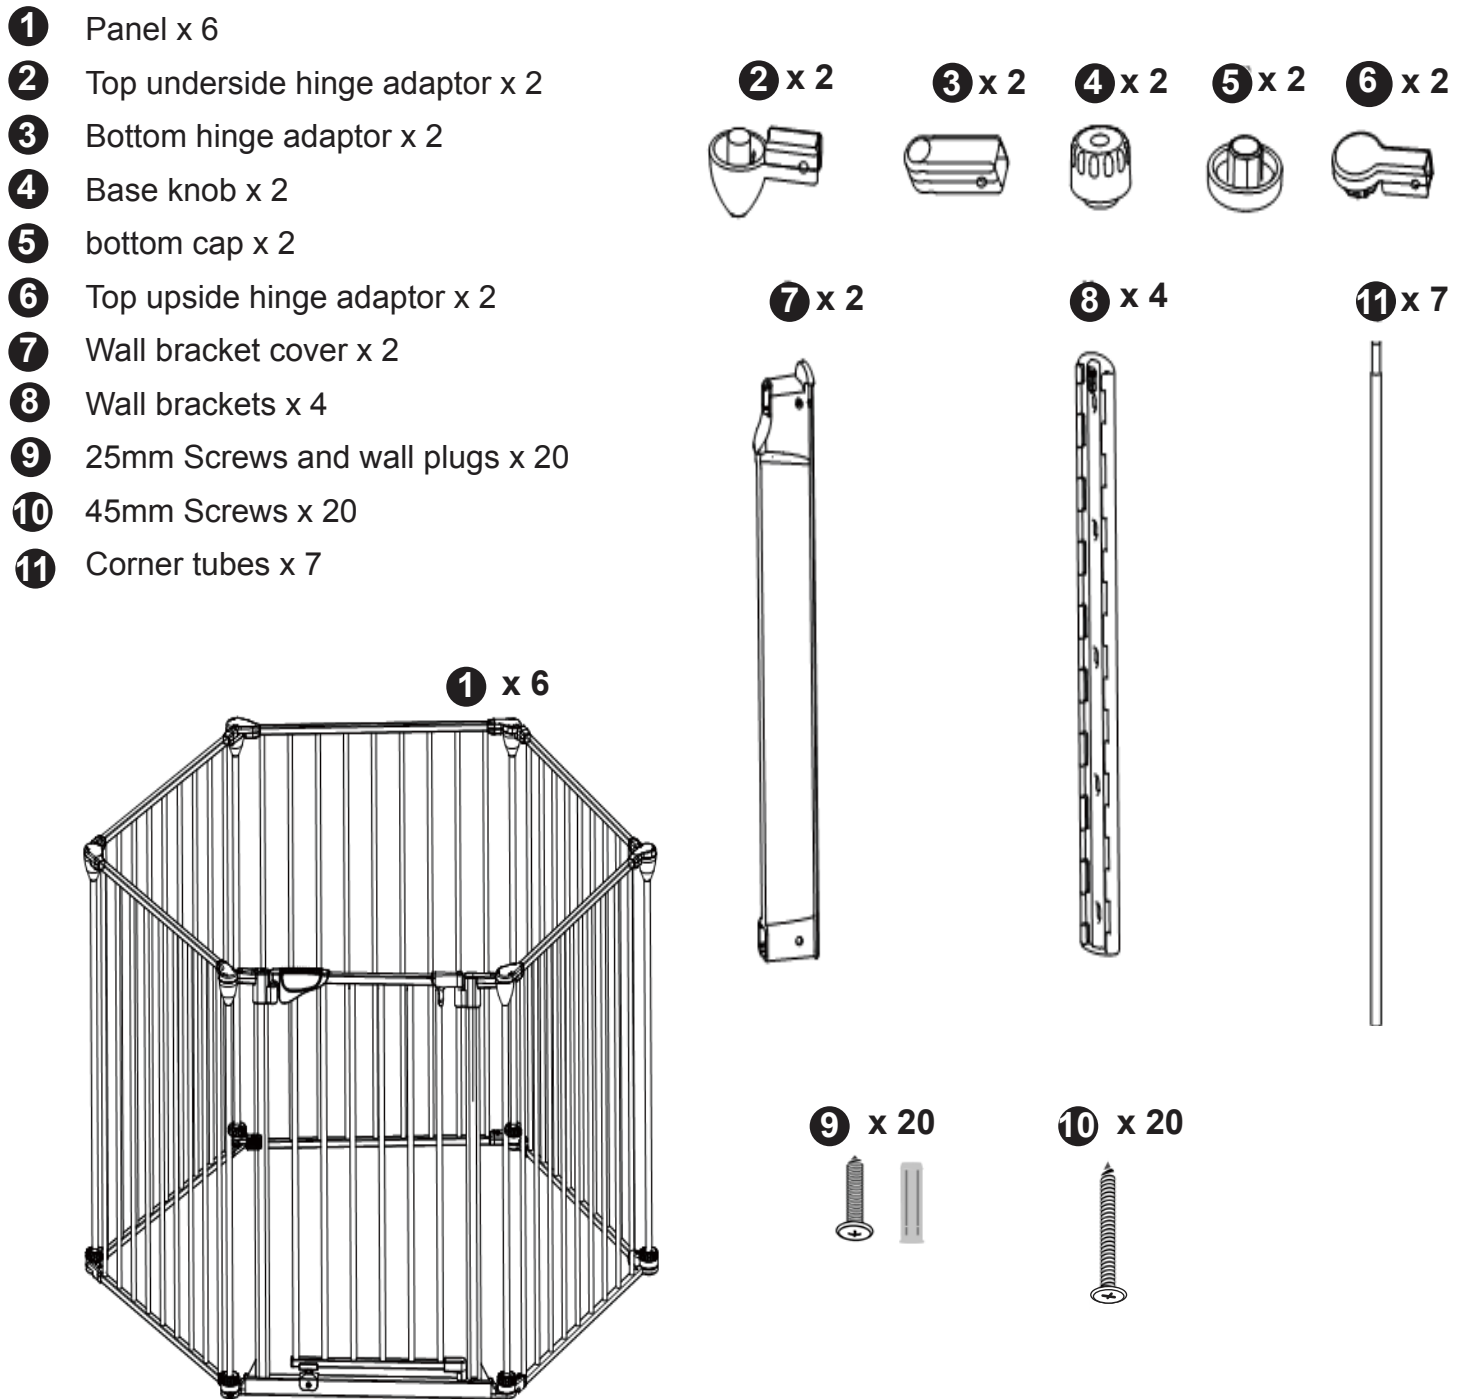

Usage: Tranzforma

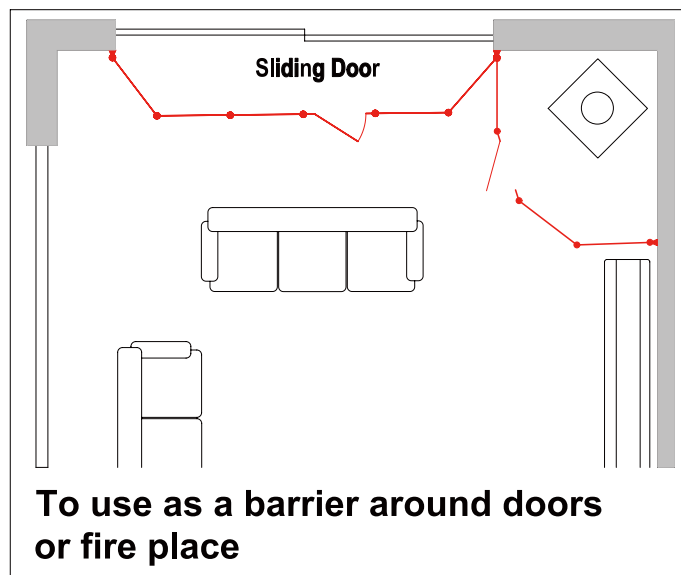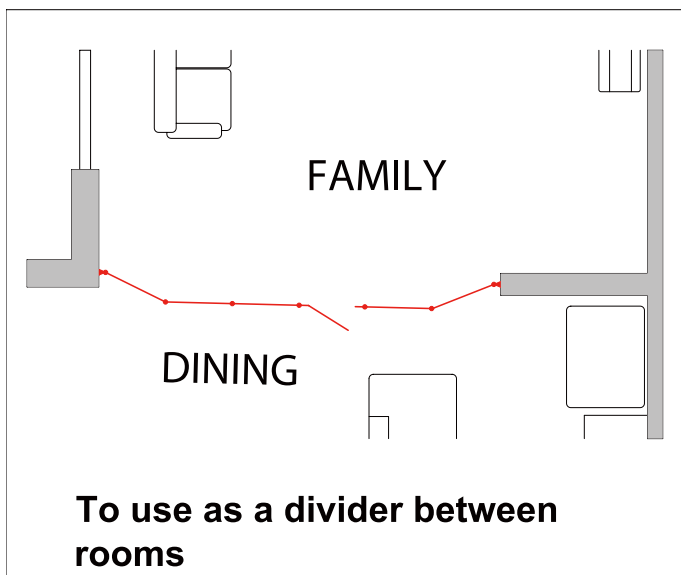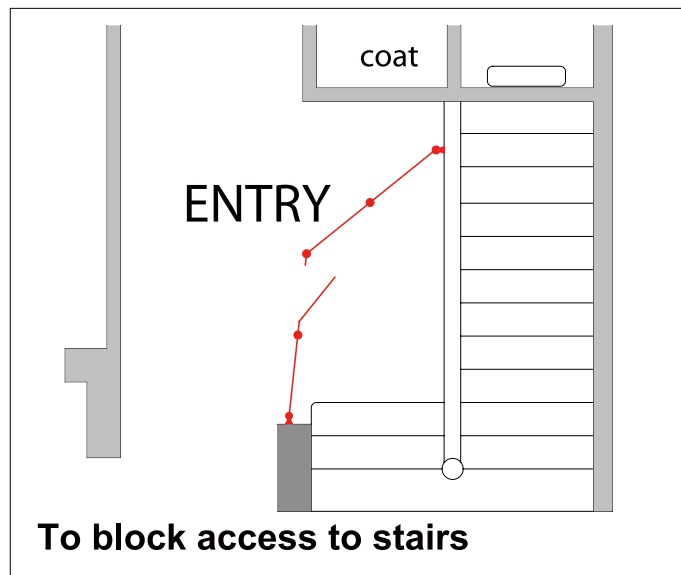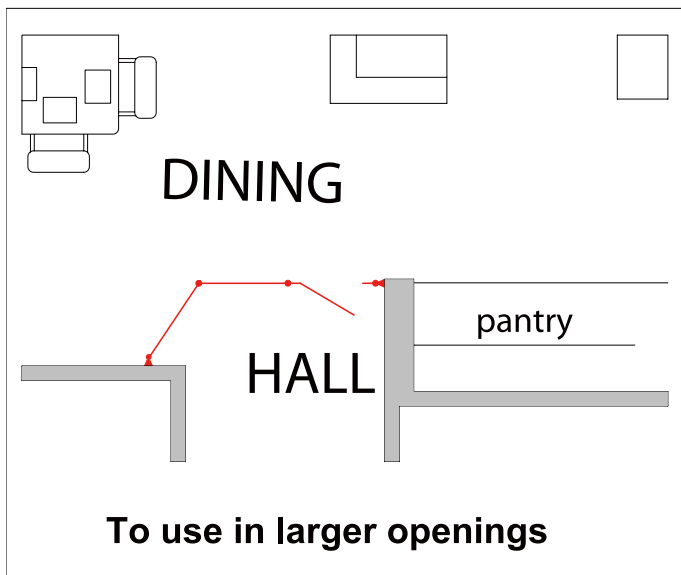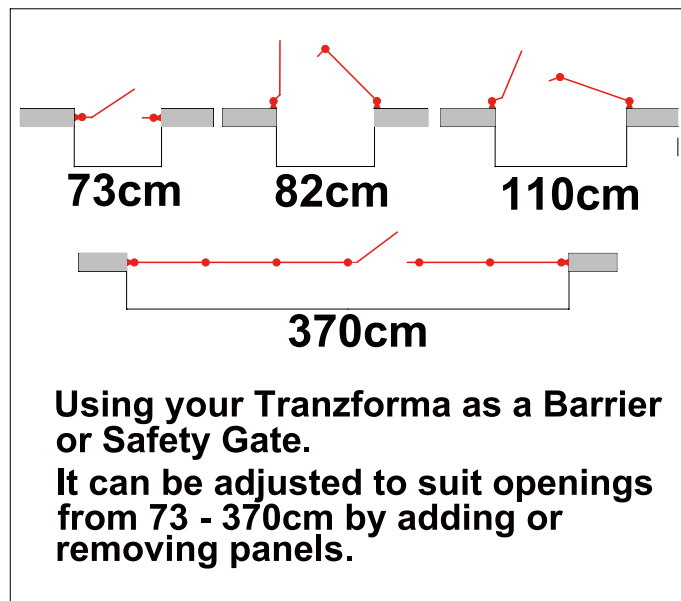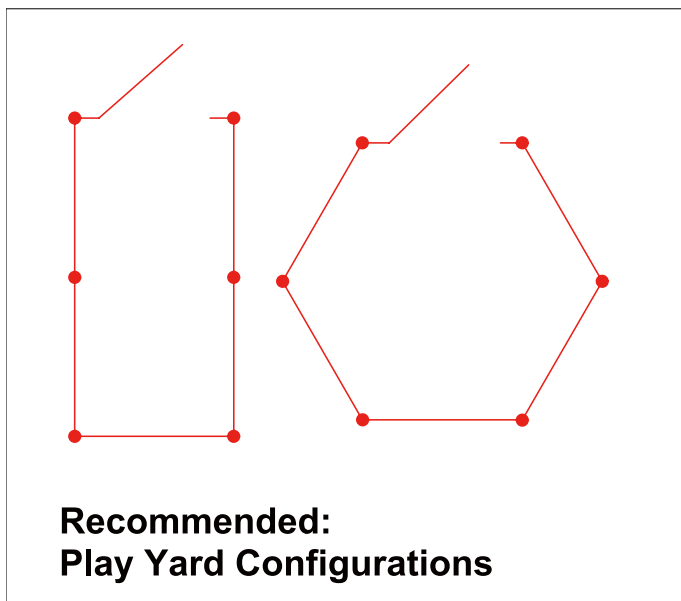

Assembly: Tranzforma

To attach or remove panels and assemble play yard

- Your Tranzforma comes with all 6 panels pre-assembled to convert you Tranzforma into a play yard, unfold the panels and join the two ends as per **Figure1** and then lock in the desired configuration eg:hexagon or rectangle.
- Below instruction is intended as a guide if you wish to change the size or configuration of your Tranzforma.
- Align the open ends of the barrier and insert into each other, panel(**B**) fits into panel(**A**). Insert the corner tube into the top hole of panel(**A**), compress the spring in the top hole with the corner tube so the corner tube can slide into the base hole of panel(**B**), as per **Figure1 & Figure2**.
- To complete your barrier, turn the hinges at the base of the barrier to the closed lock position to fix their position, as per **Figure 2A**.



Unfold the barrier and set to the desired configuration. For a hexagonal play yard set each panel to a 60 degrees angel between adjacent panels.

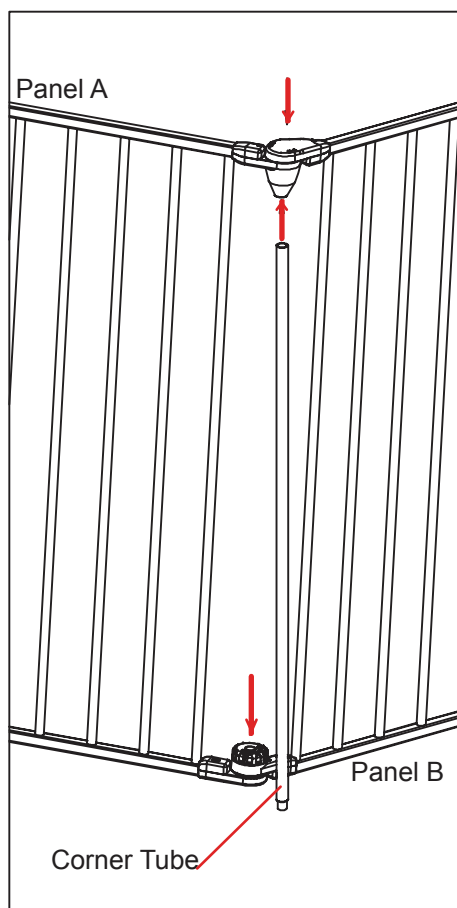


Figure 1

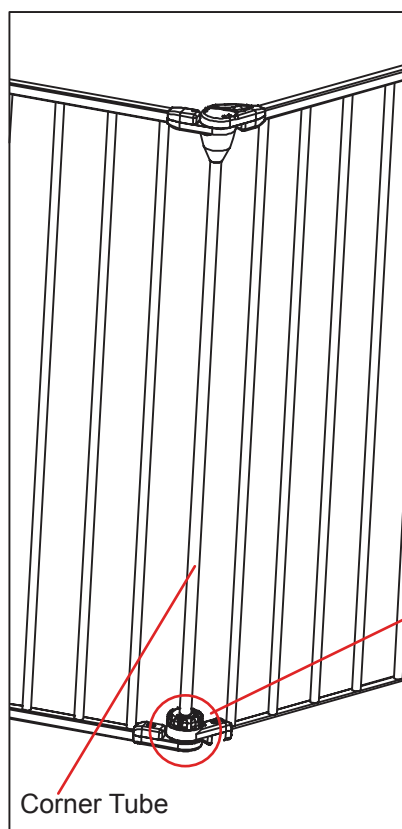


Figure 2

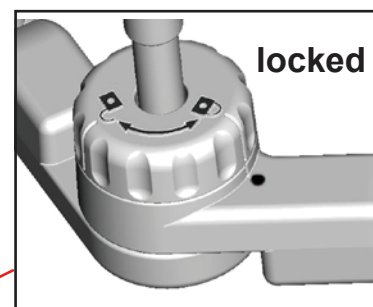


Figure 2A

Assembly: Tranzforma

To open gate

- Using one hand place thumb on the button and grip gate with fingers.
- Slide button and lift gate, then open gate in either direction, when released gate will swing closed automatically, as **per Figure 3**.
- Your Transforma can now be used, as per **Figure 3 A**.



Always check gate is properly closed.

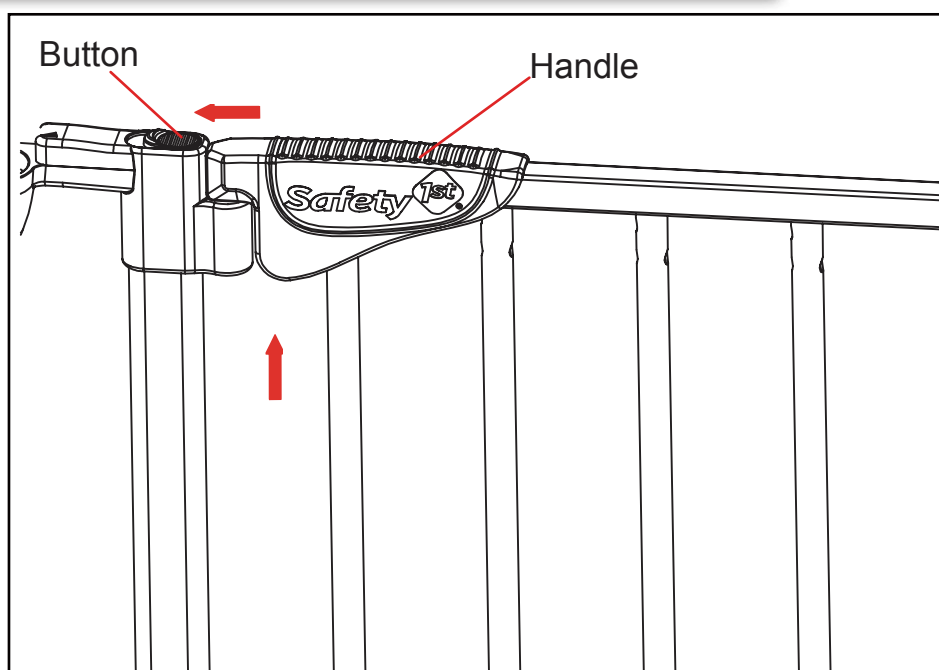


Figure 3

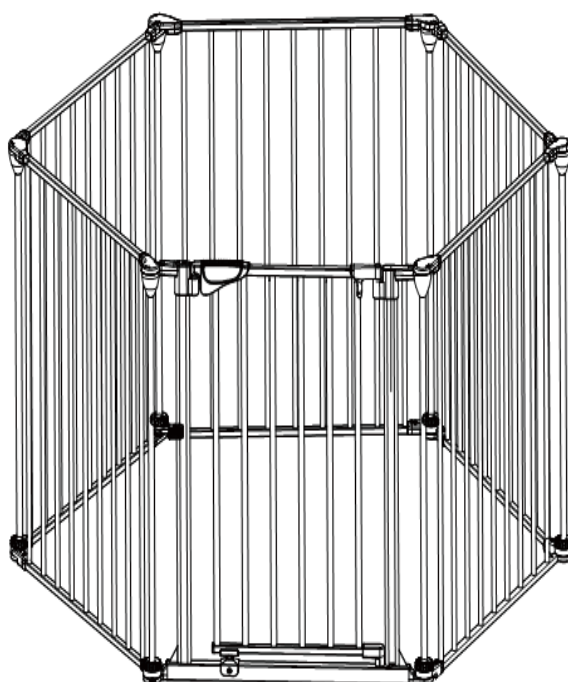


Figure 3 A

Assembly: Tranzforma

To remove unwanted panels

- Turn the base knob anti-clockwise to the unlocked position, as per **Figure 4**.
- Pull up on the corner tube to compress the spring in the top hole making it easy to slide the bottom of the corner tube out from the base, as **per Figure 5**.
- With the corner tube removed you can lift and remove the unwanted panel.

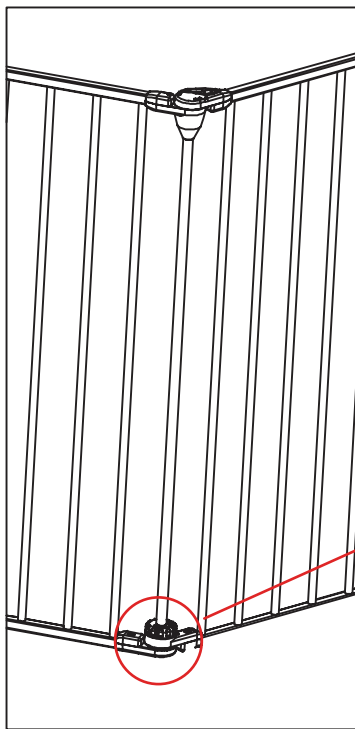


Figure 4

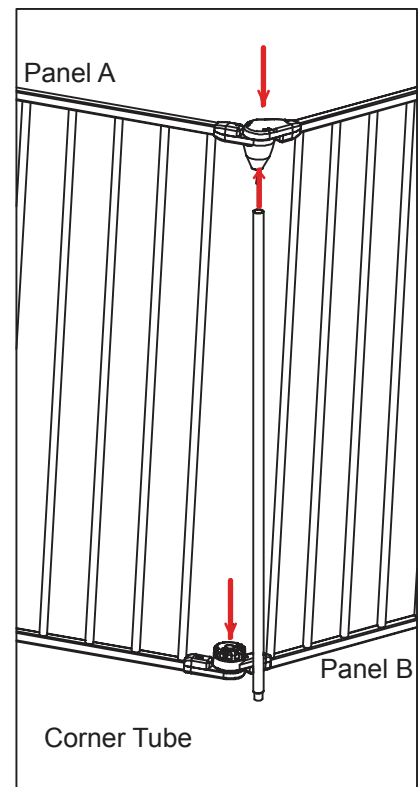
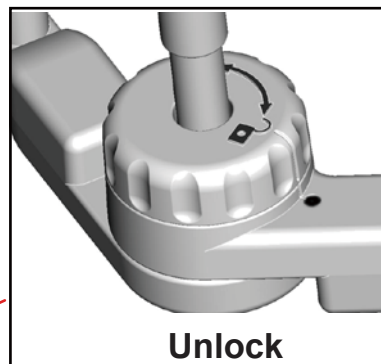


Figure 5

Lock indication

- Turn the base knob clockwise, align the locked symbol on the base knob and the round dot on the bottom. In this way, it will be locked, as per **Figure 6**.
- Turn the base knob anti-clockwise, align the unlocked symbol on the base knob and the round dot on the bottom. In this way, it will be unlocked, as per **Figure 7**.

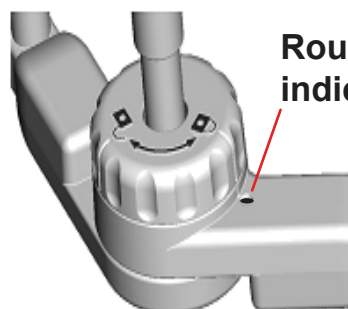


Figure 6

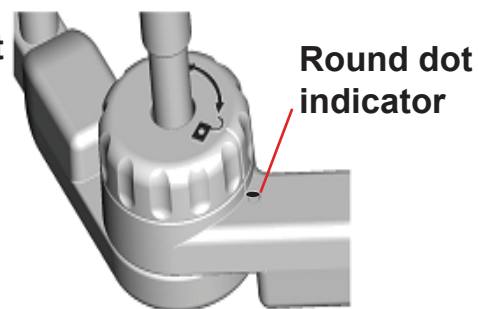


Figure 7

Assembly: Tranzforma

To convert your Tranzforma to safety barrier



Up to six panels including the gate may be used in open configurations providing the 2 end panels are securely fixed to a wall with the fixings provided.

Wall bracket assembly : For either Type A or Type B Panels.

- First slide the barrier adaptor hinges for each end, **3** over corner tube **10** and insert into **2** or **6**, then compress the spring in the top hole and slide the base of the corner tube into position above **5** or into **4**, as below. Depending on the panel type you are attaching the wall brackets to using the method of either **type A & B** shown (Figure 8 or Figure 9).


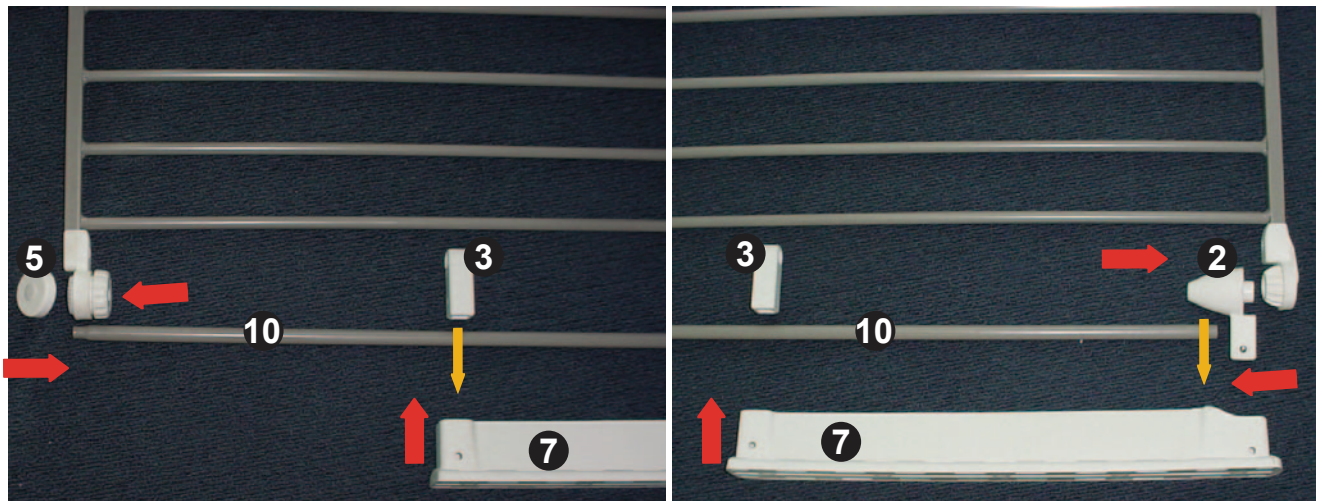


Figure 8

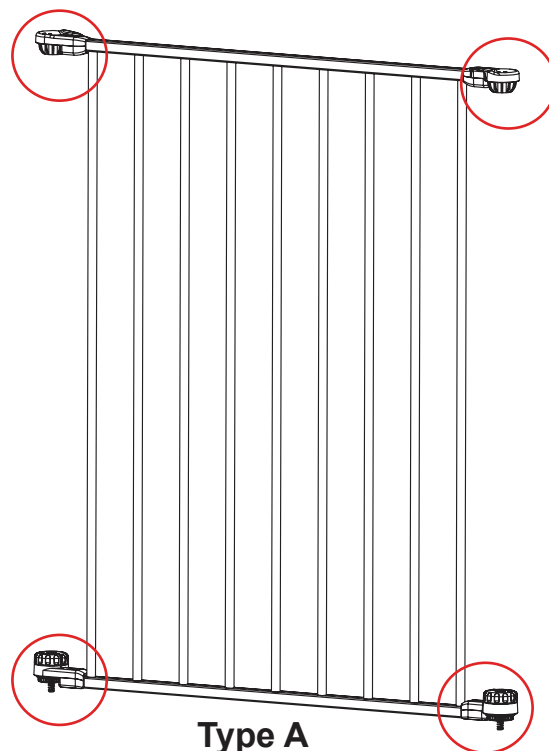

Assembly: Tranzforma

To convert your Tranzforma to safety barrier(cont)



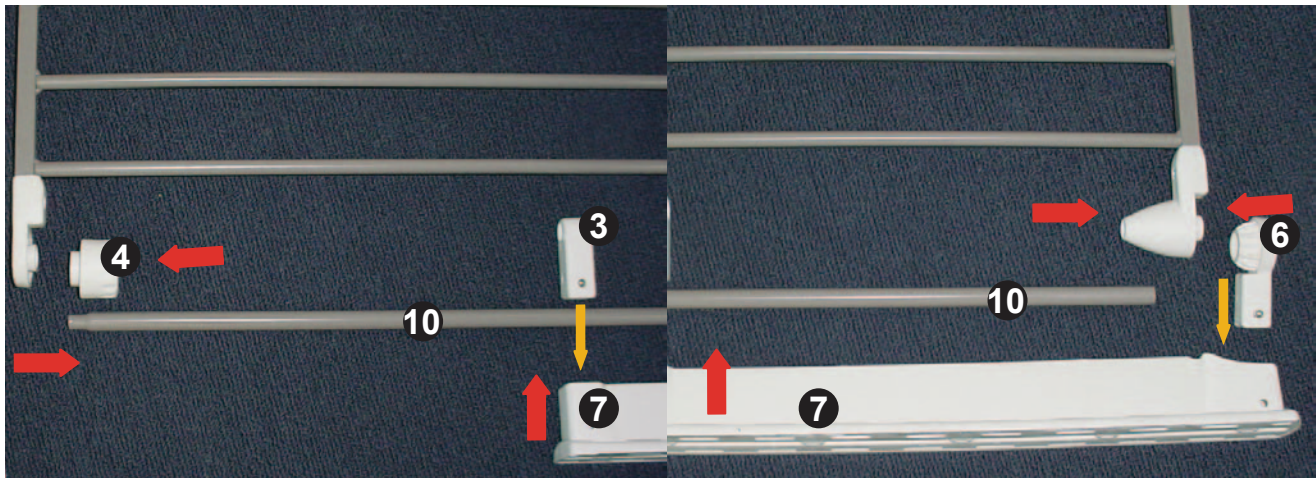


Figure 9

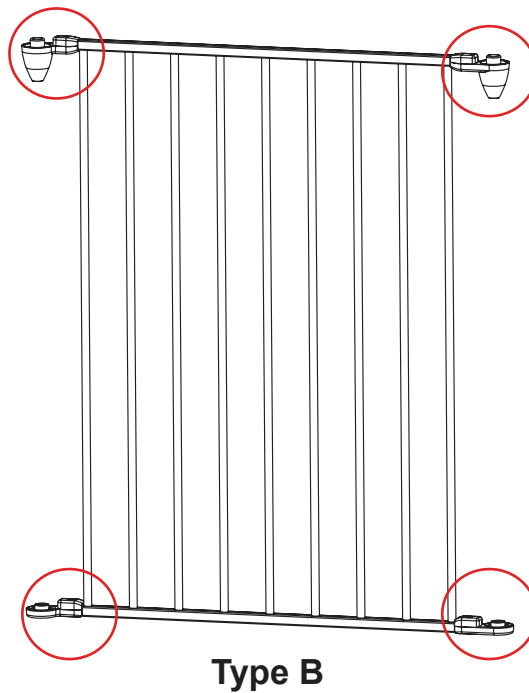

- Slide the wall bracket covers **7** over the wall brackets **8** that have been fixed to the wall or door frame (See page 11 installing wall brackets).
- Fit the end panels of your Tranzforma to the wall brackets by inserting the bottom hinge **3** and the top adaptors **6** or **2** as per **Figures 8 or 9**.
- Ensure that the small silver studs have positively engaged into the wall bracket covers.

Assembly: Tranzforma

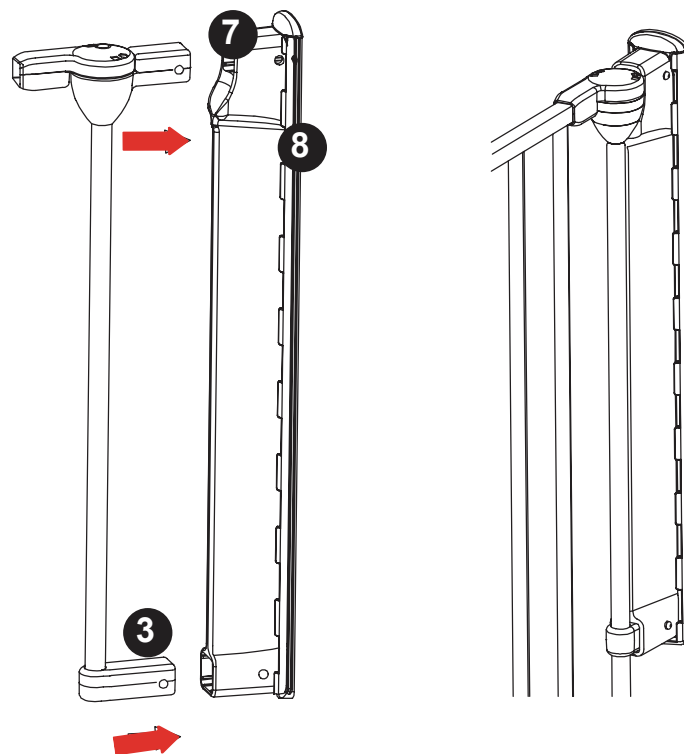

To remove the barrier panels from the wall fixings use a pen to push the top and bottom studs in, then evenly pull the barrier from the wall.

Fitting wall brackets to a wall or door frame: (Your Tranzforma is supplied with 2 sets of wall brackets, if you wish to install the barrier in a second location)

- Assemble the barrier in the desired configuration with the mounting brackets attached and place against the wall in the desired location, and draw around the outside of the mounting bracket, as per **Figure 10 & 11**.
- Slip the wall bracket off the wall bracket cover and re-position on the wall in the same position as the marks you have made on the wall, as per **Figure 12**.



Figure 10



Figure 11



Figure 12

Assembly: Tranzforma

- Mark the location of the holes in the wall bracket and drill and screw the bracket to the wall using the appropriate screws provided (as indicated below). Depress the silver spring pins on the bracket covers and remove it from the barrier. Slide the bracket cover back onto the mounting brackets and then re-attach the barrier to wall bracket. Ensuring that the silver spring pins are properly engaged.

Wood Fixing

- Drill 2mm pilot holes and use the 25mm wood screws provided and screwing directly into the wood.

Hard Wall Fixing

- Drill 6mm holes using a suitable masonry drill and insert the wall plugs provided, fix the wall bracket to the wall using the 25mm screws provided.

Plaster Board Walls

- Ensure that the wall mounting brackets are located on wall studs drill 2mm pilot holes and use the 45mm wood screws provided to screw through the plaster and fix into the wall stud. Never fix directly to plaster alone as this may make the barrier un-secure or damage your plaster wall.

Helpful Hint

- It may be a good idea to place a strip of painters masking tape on the wall before you mark the locations of the brackets and holes as this will prevent any unwanted marks on the walls while marking the position of the brackets. Once you have drilled the holes simply remove the tape before you screw the brackets on the wall.



Check that your barrier is securely fixed. Always ensure the gate is properly closed and regularly check that your barrier is securely fastened to the wall.

How to move your Tranzforma barrier to a second location







- Your Transforma is supplied with a second set of wall brackets, If you wish to install these in a second location.
- Simply lift and slide the barrier with the wall bracket covers attached, and install in the other location.



Lift and slide off wall bracket

Assembly: Tranzforma

Using your Tranzforma as safety barrier

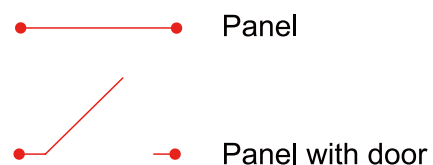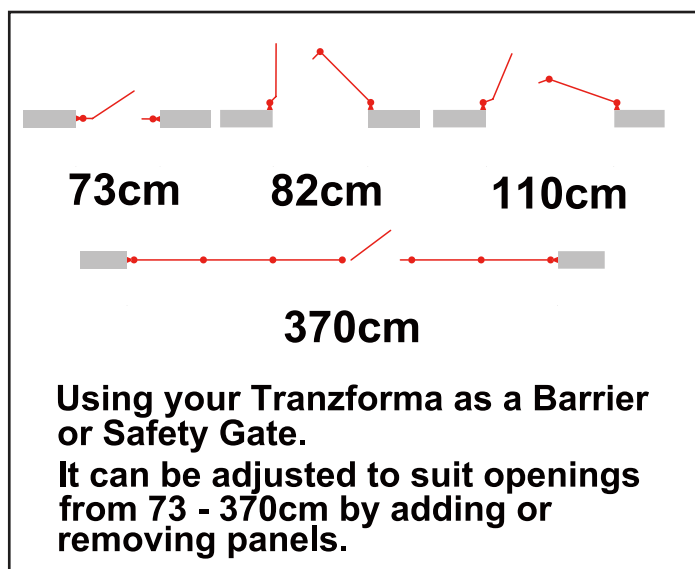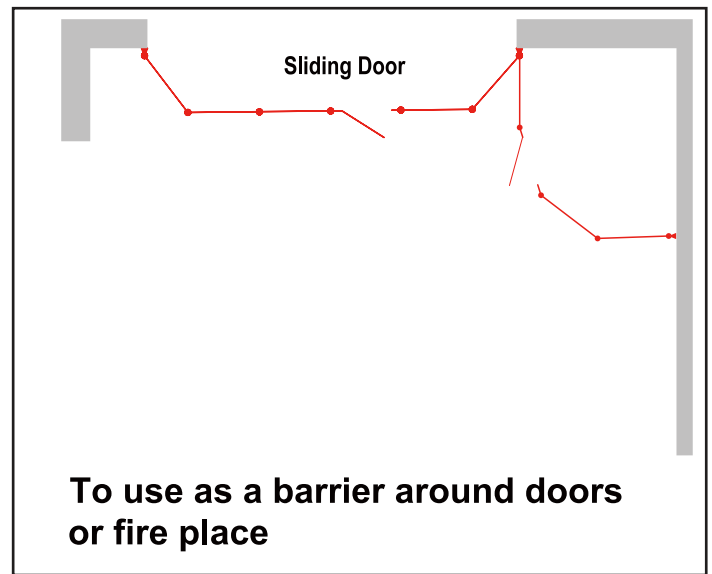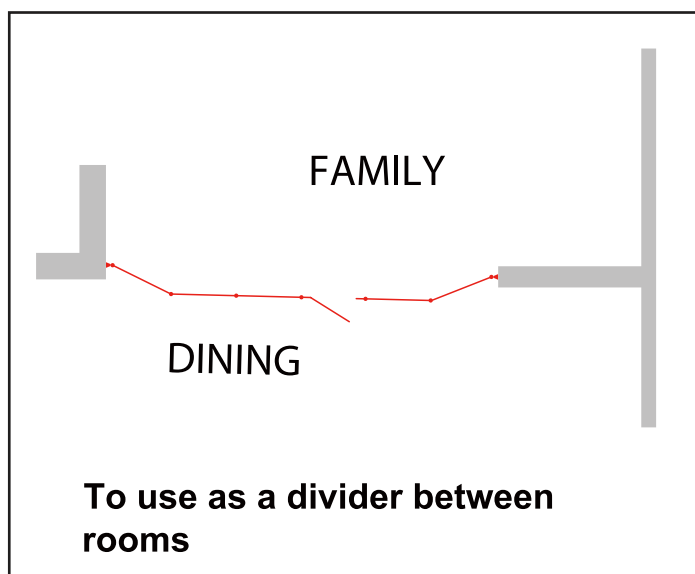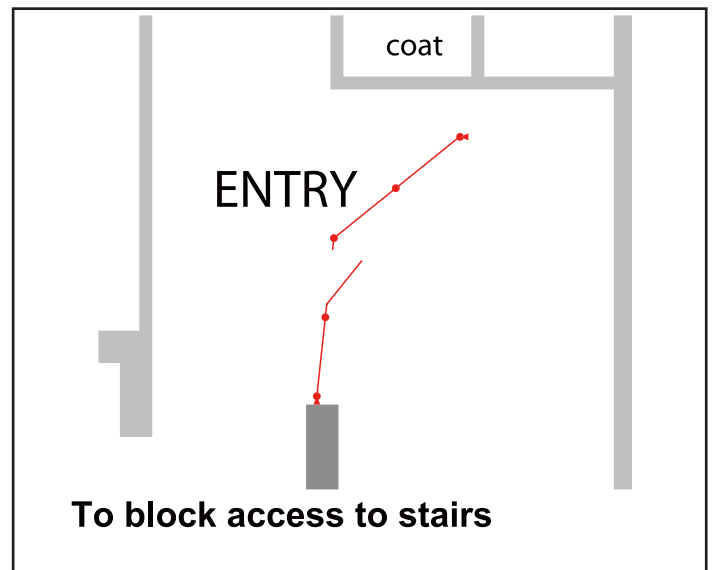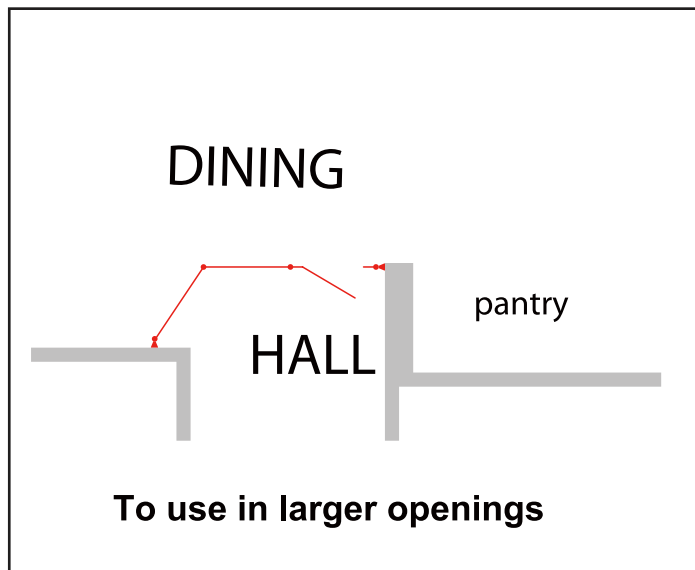

Notes:

Product care and maintenance

- Always store in a clean and dry place.
- Clean the frame by wiping with a damp cloth.
- Do not use abrasives, bleach or strong detergents.
- Regularly check for loose parts and tighten when required.
- Damaged or broken parts should be immediately replaced.

Customer service

Please contact our Customer Service Department if you experience a problem with this product or require assistance:

AUSTRALIAN CUSTOMERS

Email sales@igcdorel.com.au
Web www.igcdorel.com.au
Phone 1 (03) 8311 5300
Address 655-685 Somerville Road
 Sunshine West, Vic, 3020

Phone 2 1300 809 526 (local call cost)
Hours 8:30 am – 4:30 pm, Monday to Friday
Postal IGC Dorel Pty Ltd
 P.O. Box 1260
 Sunshine West, Victoria, 3020
Australia

NEW ZEALAND CUSTOMERS

customerservice@igc.co.nz
 www.igcdorel.com.au
 (09) 274 1040
 14 Sir William Avenue, East Tamaki,
 Auckland, 2013.

0800 628 000 (Toll Free)
 8:00 am – 4:00 pm, Monday to Friday.
 IGC Dorel New Zealand Ltd
 P.O. Box 82377 Highland Park
 Mt Wellington
New Zealand

Specifications are subject to change without notice.
 Copy or reproduction without permission is prohibited.
 © 2011 IGC Dorel Pty Ltd. All Rights Reserved. www.igcdorel.com.au